




Section 6: Installation Photographs

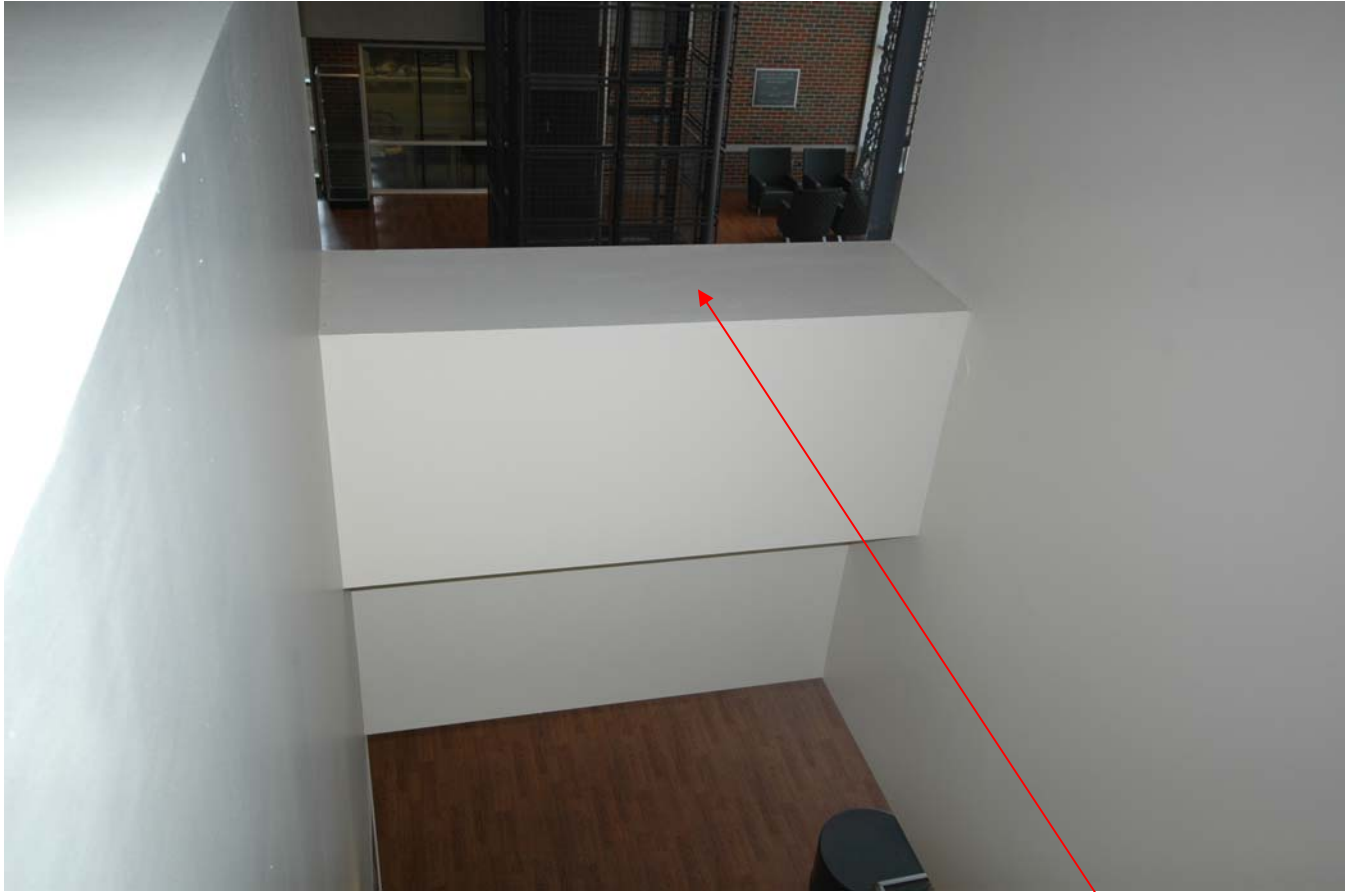

AVOID: Top of drywall bulkhead to be sloped to prevent dust buildup.

This area should be sloped